

NEXT GENERATION SECURITY SCREENS

ARMOUR 



**CARE AND
MAINTENANCE
GUIDE**



FRANKLYN

"Frankly only Franklyn will do"

THANK YOU!

Thank you and congratulations on adding ArmourX™
“The Next Generation of Security Screens” to your home.

Please follow this care and maintenance guide to help keep your ArmourX security screens looking and performing at their best.

- The removal of dirt, dust and grime regularly through general cleaning is essential.
- This can be easily done by using a mild detergent, warm water and a non-abrasive brush or cloth.
- Loose deposits can be removed with a wet sponge.
- Rinse away with clean water.
- Do not use strong detergents or harsh cleaners as these can damage the powder coat finish of your screen; increasing the likelihood of corrosion.

Keep key cylinders lubricated through annual maintenance or if there are signs of roughness when inserting or retracting the key.

- Remove dirt, grime and salt deposits around the exterior of the cylinder.
- Apply a small amount of Inox MX3 to your key only. Insert and retract the key from the lock barrel to provide a smooth action.

DO NOT SPRAY DIRECTLY INTO LOCK BARREL.

DO NOT USE WD40 OR OTHER OIL BASED LUBRICANTS.



The maintenance period may differ depending on your surrounding environmental elements; refer to this maintenance table as a general guide.

Environment	Description	Maintenance interval
Mild	Greater than 10km from beachfront or bay area	Every 6 months
Moderate	Within 1km to 10km of beachfront or bay area	Every 2-3 months
Marine	Within 500m to 1km of beachfront or bay area	Every 2-4 weeks
Severe Marine	Within 500m of beachfront or bay area	Every 1-2 weeks

If you have any further questions about the care and maintenance of your ArmourX security screen, please contact us.



ARMOUR 

EXCLUSIVE TO



"Frankly only Franklyn will do"

Contact details:

Franklyn

07 3245 9200

www.franklyn.net.au